

Mediatrix C7 シリーズの簡単な立上方

コアコンピュータンス株式会社

2019年10月

Media5 社 Mediatrix 製品をスムーズに簡単に立ち上げる方法をご紹介します。
 まず、静電気の除去を行ってから箱から製品を取り出して机に置きます。



LEDs

#	LED	Behavior	Condition
1	Ready	Green, steady ON	All lines are enabled (operational state)
		Green, steady OFF	All lines are disabled (operational state)
		Blinking 1 cycle per 4 seconds, 75% duty	At least one line is enabled and at least one line is disabled (operational state)
2	In-Use	OFF	Lines idled and unlocked
		Steady ON	Lines in use and unlocked
		Steady yellow	Shutting down
		Yellow, blinking yellow, 1 cycle per second, 50% duty	Locked
3	ETH1	Green, blinking, variable rate	Network traffic
		Green, steady ON	No network traffic
		OFF	Not connected

#	LED	Behavior	Condition
4	ETH2	Green blinking, variable rate	Network traffic
		Green, steady ON	No network traffic
		OFF	Not connected
5	Power	Amber, steady ON	Restart completed
		OFF	Indicates that the unit is not connected
		Blinking, 1 Hz, 50% duty	Restart in progress



Note: The FXS and FXO ports may differ location depending on the model you have.

Switches

#	Switch	Description
2	Reset/Default	Allows setting the unit to default (known) values. Refer to RESET/DEFAULT Button (p. 25)

Connectors and cards

#	Connectors/cards	Description
1	Power	External 12 Vdc 1.5A power supply.
3	USB	USB connector
4	ETH1	A 10/100 BaseT Ethernet RJ-45 connector for access to a LAN, WAN or computer. This port is by default used for uplink / WAN connection.

#	Connectors/cards	Description
5	ETH2	10/100 BaseT Ethernet RJ-45 connector for access to a LAN, WAN or computer. These ports are used by default for LAN connections.
6	FXO card with 4 FXO ports	4 x RJ-11 connectors offering SCN access for various VoIP endpoints such as IP phones, FXS devices, softphones and IP-based PBX and Key Systems.
7	FXS card with 4 FXS ports	4 x RJ-11 connectors to attach a conventional telephone or G3 fax machine.

電源アダプターと電源コードを取り出して、電源コードのプラグを電源アダプターに差し込みます。電源アダプターの DC プラグを MediatriceG7 の背面の Power に差し込みます。

LAN ケーブルを ETH2 のコネクタに差し込みます。LAN ケーブルの反対側のコネクタは PC の LAN ケーブルに差し込み、PC の IP アドレスは 192.168.0.11 にして 192.168.0.10 をブラウザでアクセス。

Mediatrix[®]

❖ Please enter your username and password

User Name:

Password:

ブラウザにこの表示が現れます。ユーザーネームは public で、パスワードはブランクです。

DHCP サーバが IP アドレスを振り出している場合は、Mediatrix の MAC アドレスからその IP アドレスを確認できます。

その場合はインターネットの繋がる LAN ポートから出たケーブルを ETH1 に接続して、ブラウザで DHCP サーバの振り出したアドレスでログインできます。